

1	1L	1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9	2L	1	
10		2	
11		3	
12		4	
13		5	
14		6	
15		7	
16		8	
17	3L	1	
18		2	
19		3	
20		4	
21		5	
22		6	
23		7	
24		8	
25	4L	1	
26		2	
27		3	
28		4	
29		5	
30		6	
31		7	
32		8	
33	5L	1	
34		2	
35		3	
36		4	
37		5	
38		6	
39		7	
40		8	

41	6L	1	
42		2	
43		3	
44		4	
45		5	10L 5と切り替え
46		6	10L 6と切り替え
47		7	10L 7と切り替え
48		8	10L 8と切り替え
49	7L	1	
50		2	
51		3	
52		4	
53		5	11L 5と切り替え
54		6	11L 6と切り替え
55		7	11L 7と切り替え
56		8	11L 8と切り替え
57	8L	1	
58		2	
59		3	
60		4	
61		5	12L 5と切り替え
62		6	12L 6と切り替え
63		7	12L 7と切り替え
64		8	12L 8と切り替え
65	9L	1	
66		2	
67		3	
68		4	
69		5	13L 5と切り替え
70		6	13L 6と切り替え
71		7	13L 7と切り替え
72		8	13L 8と切り替え
73	10L	1	
74		2	
75		3	
76		4	
77	11L	1	
78		2	
79		3	
80		4	

81	12L	1	
82		2	
83		3	
84		4	
85	13L	1	
86		2	
87		3	
88		4	
89	UH	1	#71
90		2	#63
91		3	#22
92		4	#W
93	1WC	1	
94		2	
95		3	
96		4	
97	2WC	1	
98		2	
99		3	
100		4	
101	3WC	1	3FC 1と切り替え
102		2	3FC 2と切り替え
103		3	3FC 3と切り替え
104		4	3FC 4と切り替え
105	4WC	1	6FC 1と切り替え
106		2	6FC 2と切り替え
107		3	6FC 3と切り替え
108		4	6FC 4と切り替え
109	5WC	1	
110		2	
111		3	
112		4	
113	6WC	1	
114		2	
115		3	
116		4	
117	1FC	1	4FC 1と切り替え
118		2	4FC 2と切り替え
119		3	4FC 3と切り替え
120		4	4FC 4と切り替え
121	2FC	1	5FC 1と切り替え
122		2	5FC 2と切り替え
123		3	5FC 3と切り替え
124		4	5FC 4と切り替え

125	DL	1	客電マエ
126		2	
127		3	
128		4	
129		5	
130		6	
131		7	
132		8	客電オク

↑↓

■ = DMX番号

持込み機材のアドレスは、
141～512を使用してください。

多目的スタジオ
照明負荷対応表